



# ROVECONCEPTS

Refined Luxury Living

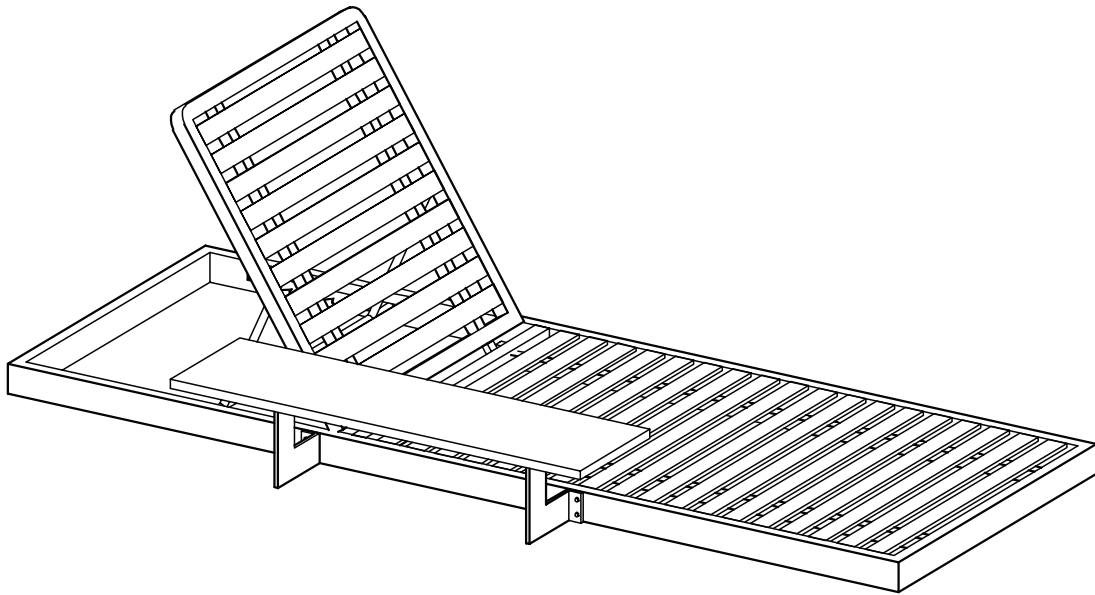


## FLORIAN OUTDOOR DAYBED ASSEMBLY INSTRUCTIONS

# HARDWARE

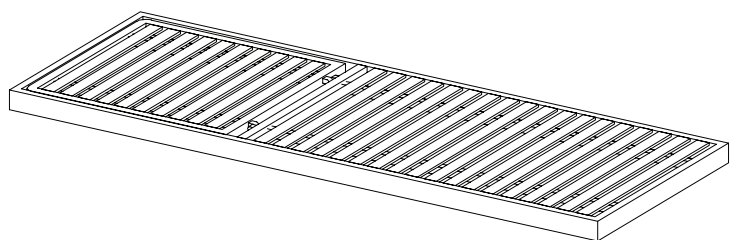


**A**

x1

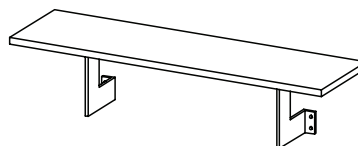


**B**

x1



**C**


x4  
M6\*22

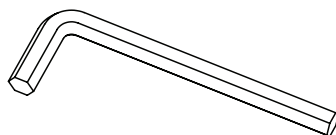

**D**

x1  
M6

# STEP 1

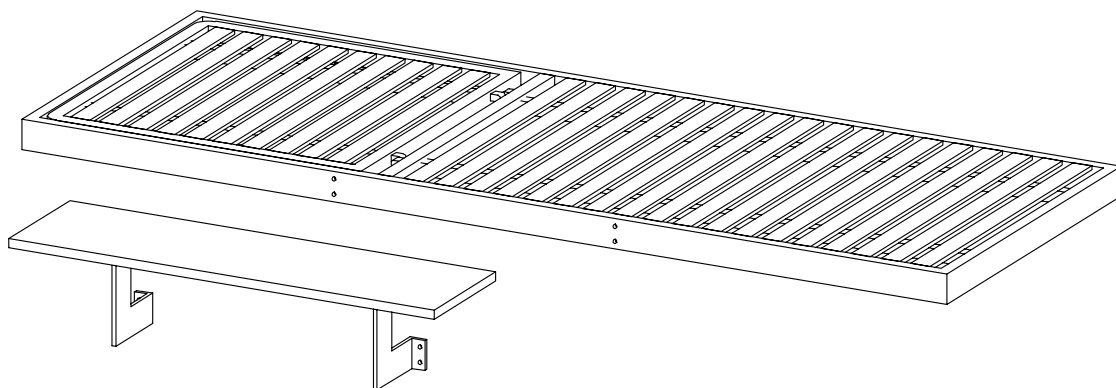

# STEP 2

