



ROVECONCEPTS

Refined Luxury Living

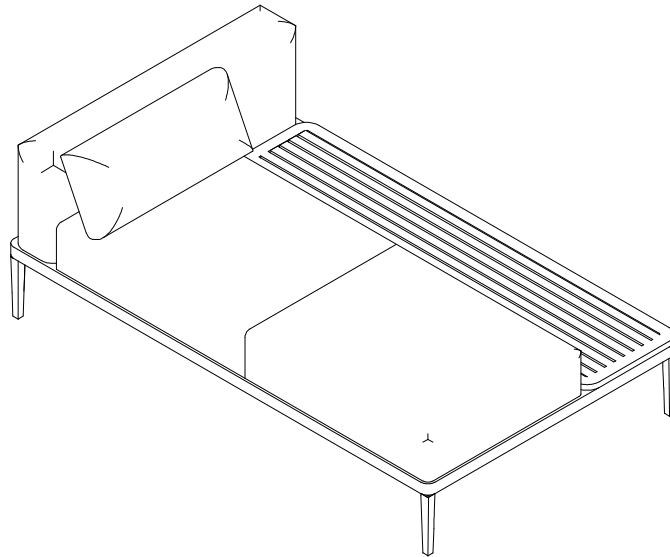

FRANCIS OUTDOOR CHAISE ASSEMBLY INSTRUCTIONS

HARDWARE



A

x1
Wrench




B

x16
Washer



C

x8
M6*25mm Screw



D

x4
M6*40 Screw



E


x6
M6*20mm Screw



F

x2
Connector

STEP 1

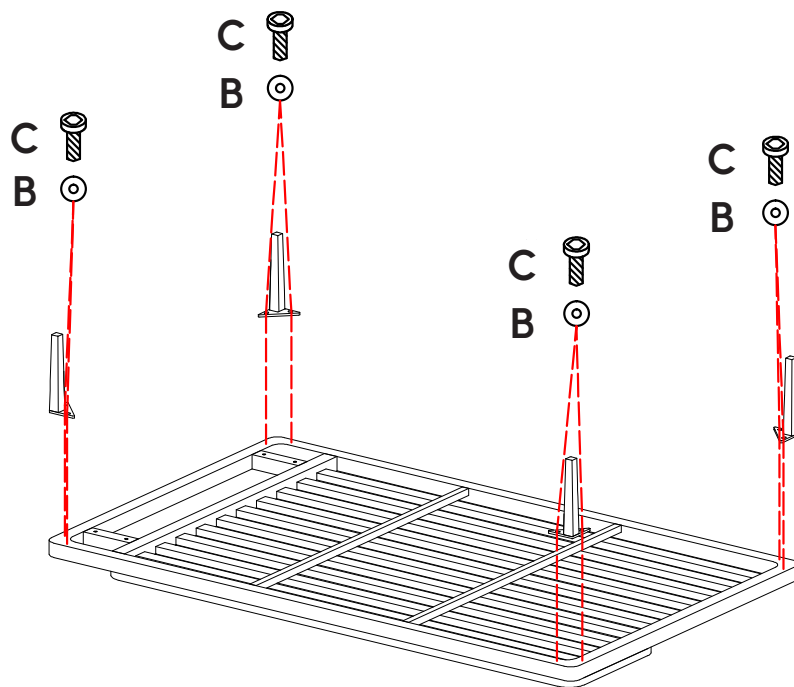

STEP 2

Tighten all screws and finish.

