


# ROVECONCEPTS

Refined Luxury Living

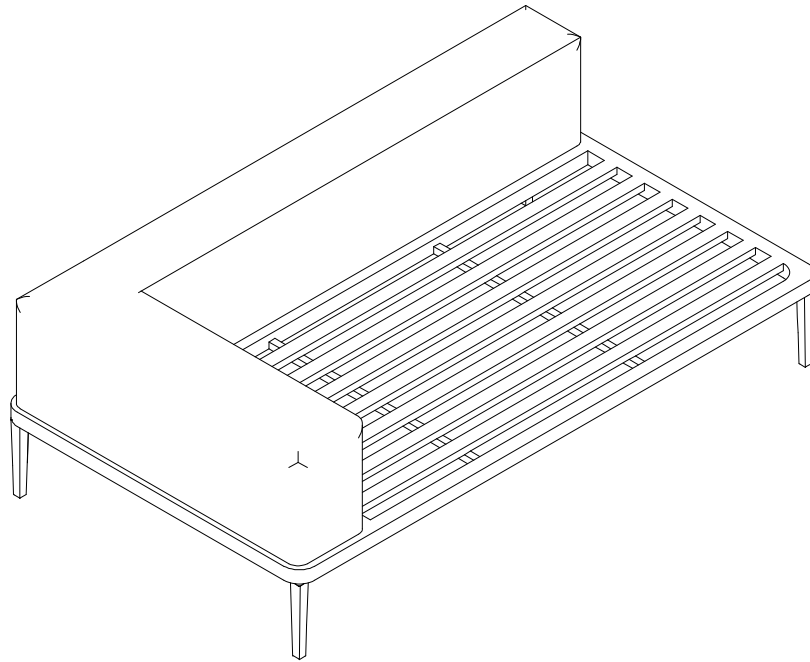

## FRANCIS OUTDOOR LEFT/RIGHT ARM TWO SEATER ASSEMBLY INSTRUCTIONS

# HARDWARE



**A**

x1  
Wrench




**B**

x10  
Washer




**C**

x8  
m6\*25mm Screw



**D**


x6  
m6\*20mm Screw



**E**

x2  
Connector

# STEP 1

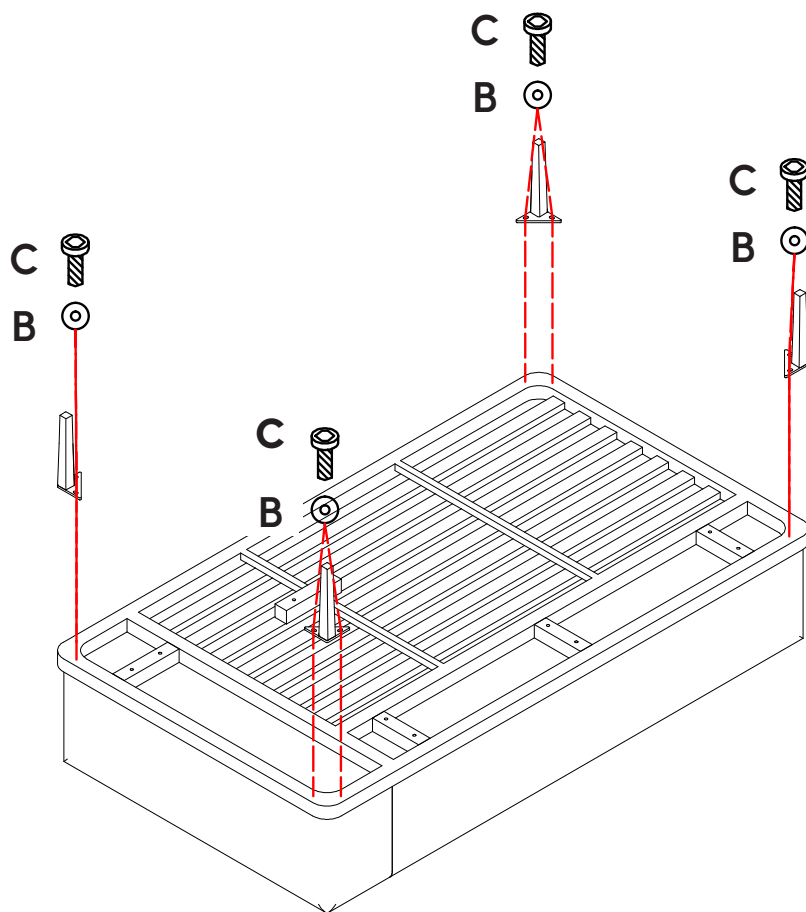

# STEP 2

Tighten all screws and finish.

