



ROVECONCEPTS

Refined Luxury Living

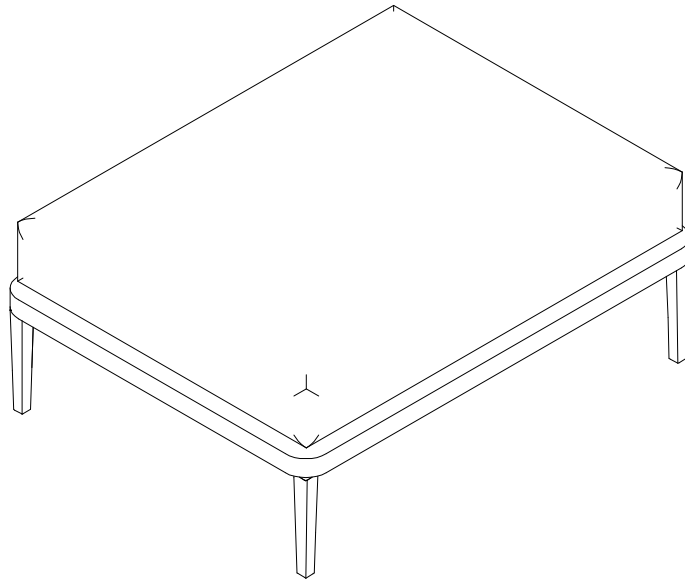

FRANCIS OUTDOOR OTTOMAN ASSEMBLY INSTRUCTIONS

HARDWARE



A

x1
Wrench



B

x8
Washer



C

x8
m6*25mm Screw

STEP 1

Tighten all screws and finish.

