


ROVECONCEPTS

Refined Luxury Living

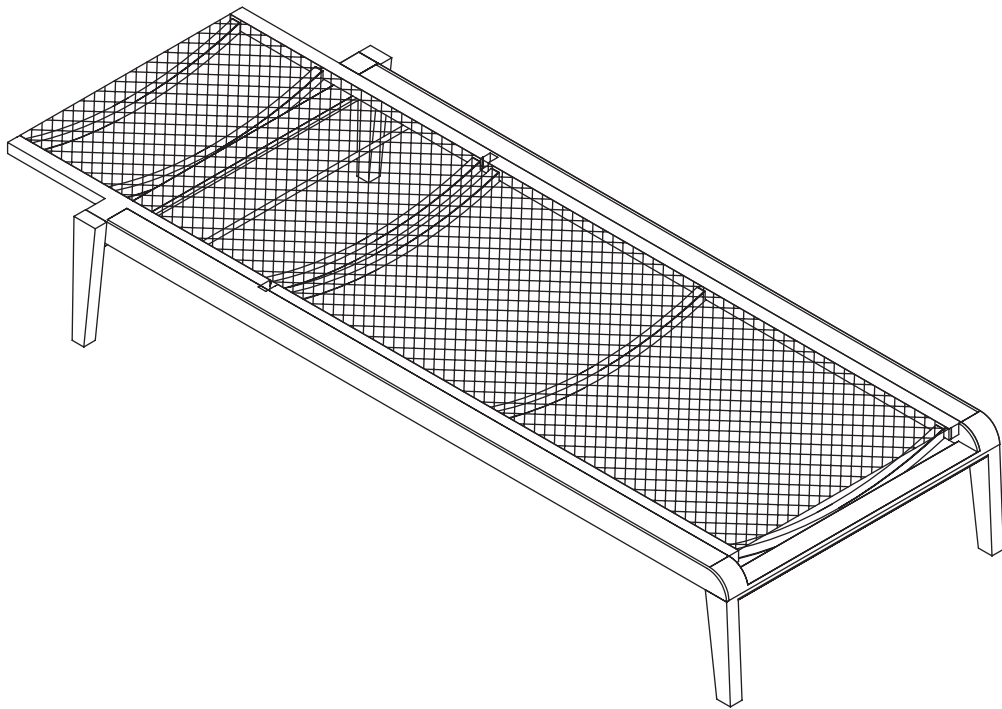

PRESTON OUTDOOR LOUNGER ASSEMBLY INSTRUCTIONS

HARDWARE



A

x1




B

x10
Washer



C

x8
M6*25mm



D

x2
M6*40mm



E


x2
Plastic Washer




F

x10

STEP 1

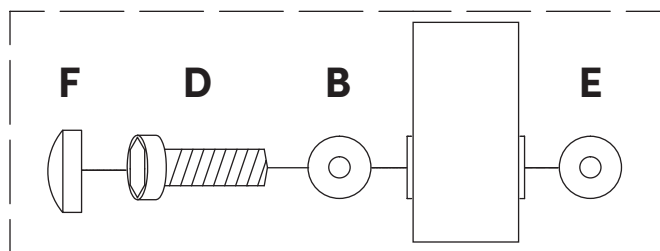

Tighten all screws

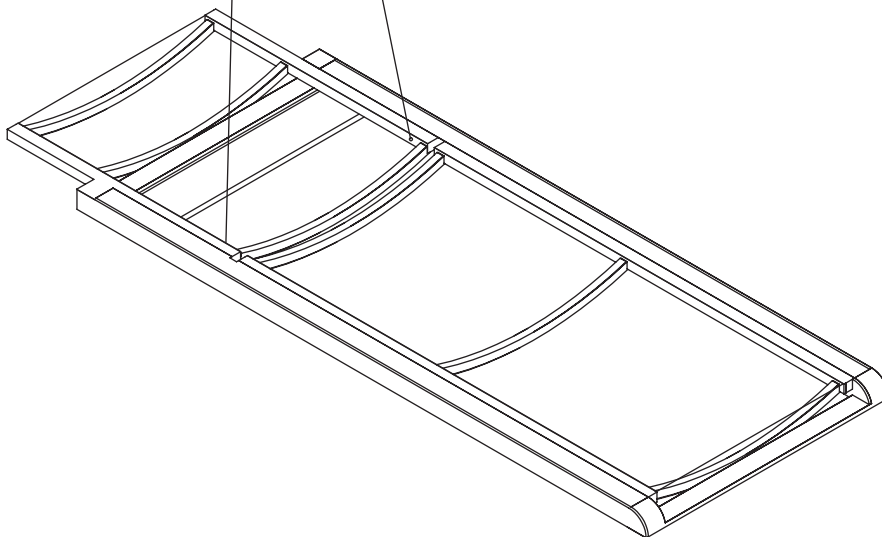

STEP 2

