

ROVECONCEPTS

SOLANA DINING CHAIR ASSEMBLY INSTRUCTIONS

HARDWARE



A

x4
M6*20



1



B

x4
M6*50




2



C

x1
M8*25

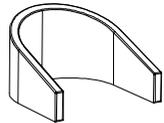


3



D

x1
4mm




4




E

x1
5mm

STEP 1

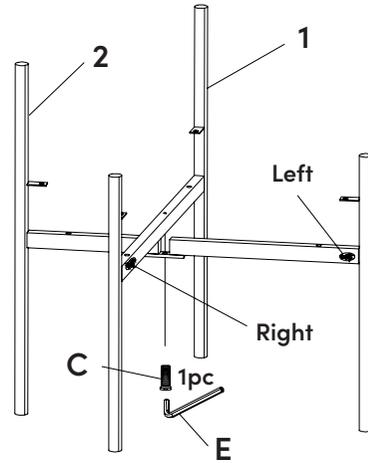


STEP 2

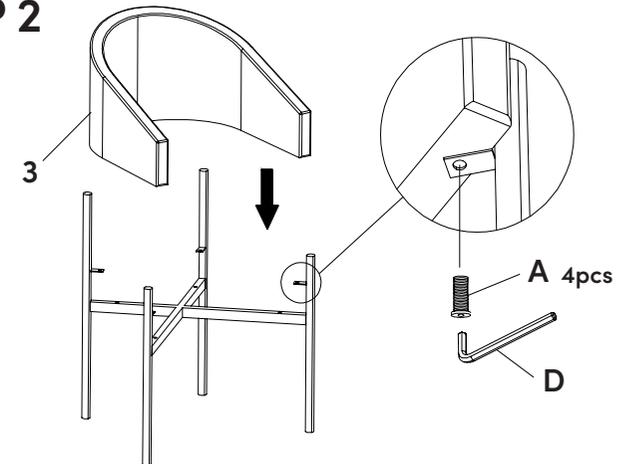


Install the rear two screws first; then the front two screws next.
DO NOT overtighten until all screws is in place.

STEP 3

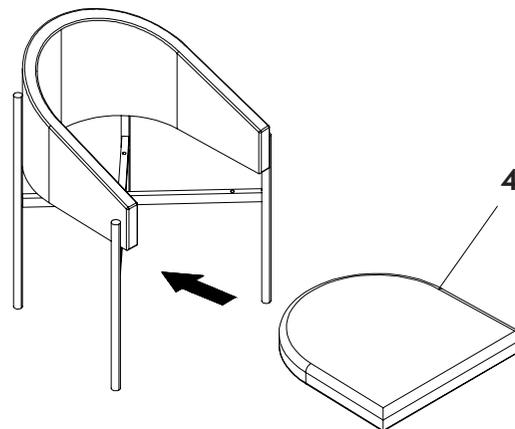

STEP 4

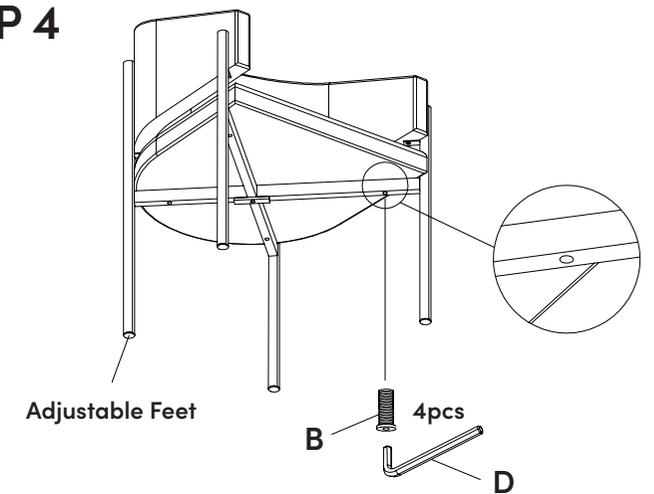

Install the rear two screws first; then the front two screws next.
DO NOT overtighten until all screws is in place.